

Chassis Quick Reference

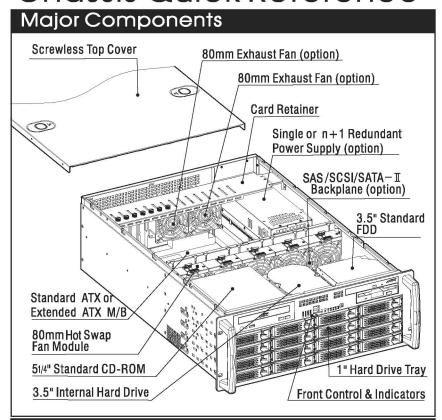


Front Panel Controls and Indicators


- A. HDD Tray Activity LED
- B. USB 2.0 Port
- C. System Reset Button
- D. Alarm Mute Button
- E. System HDD Activity LED
- F. Power LED
- G. Failure LED
- H. LAN1 & LAN2 LED
- I. Power Switch

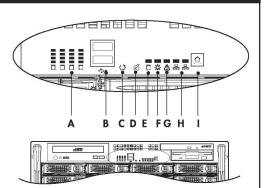



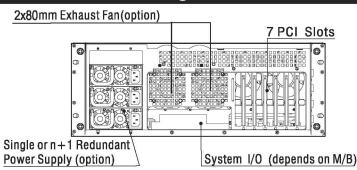


Top Cover Opening

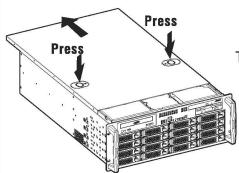

▲ CAUTION ▲


This unit must be operated with the chassis TOP COVER installed to ensure proper cooling

Installing Hard Drive

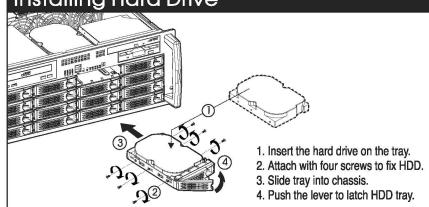


Removing & Installing Fan Module Power Supply & Card Retainer

- 1. Attach with 10pcs screws for power supply
- 2. Attach with 8pcs screws
- 3. Release screw and move toward (2) right side then take out retainer by up direction

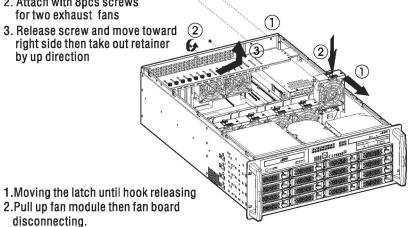

Installing 51/4" Standard CD-ROM

 1. Release screw then move back and take out bracket




2. Release two screws to detach CD-ROM cover







 to fit CD-ROM on bracket




4. Attach back original screw

Installing Internal HDD & FDD

 - 1. Release screw then move back and take out bracket
- 2. Attach with four screws to fit HDD/FDD on bracket
- 3. Fit to two gauge pins and move forward until fasten
- 4. Attach back original screw









5. Repeat step 1~4 for 2nd backplame

assembly and placement

FDD





Installing Backplane Assembly

- 1. Attach with 4 stand-offs on bracket location with "S" mark.
- 2. Attach with 4 screws for each backplane assembly. 3. Place backplane assembly along
- internal backplane guide rail.



