

# Procedura di Accensione e Spegnimento Storage OpenStor in Failover

#### Premesse:

- Lo Storage Primario/Attivo è chiamato VDSS1, quello Secondario/Passivo VDSS2
- Per "console" si intende la visualizzazione tramite interfaccia IPMI oppure da Monitor collegato allo storage
   Nell'esempio riportato è presente solo 1 Volume iSCSI in replicazione, nel caso di più volumi applicare le operazioni descritte per il singolo per ogni volume in replicazione.
- Tutte le operazioni devono essere effettuate conoscendo approfonditamente lo stato dell'intero sistema Host/Storage, è altresì richiesto che gli storage siano stati configurati per inviare le Email di segnalazione.

Attenzione: per tutti i casi in cui gli storage differiscano come "stato" rispetto a quanto descritto dal presente documento, richiedere l'intervento di un tecnico specializzato OpenStor, un'errata manovra potrebbe causare perdita di dati.

## **PROCEDURA DI ACCENSIONE**



- Avviare lo Storage Secondario VDSS2

🛃 ¥D552 on 192.168.0.64		
<u>Eile View V</u> M		
🗖 🗉 🕟 🧐 🔯 🕼 🕼	🗞 📎	
Welcome to Data Storage Softwar	e V6	(Press F1 for help)
Model: Version: Release date: S/N: Licensed storage capacity:	Data Storage Software V6 6.0up65.8101.5217 64bit 2011-02-28 TRL00022 unlimited	
Network settings: Interface 1: eth0 IP:192 Interface 2: eth1 IP:100 Interface 3: eth2 IP:200 Interface 4: eth3 IP:192	. 168 . 0 . 171/255 . 255 . 255 . 0 . 0 . 0 . 2/255 . 255 . 255 . 0 . 0 . 0 . 2/255 . 255 . 255 . 0 . 168 . 3 . 221/255 . 255 . 255 . 0	
HTTPS settings: port: allow from:	443 all	
This is TRIAL version. 60 day(s	) left for evaluation.	
Selftest OK.		

- dalla console del VDSS2 attendere fino alla schermata di "welcome"



### - Effettuare il login sull'interfaccia WEB del VDSS2

🖉 vdss2 - Data 9	Storage Software ¥6 - Windows Intern	et Explorer				
00 · E	https://vdss2/			• + ×	Google	P -
😪 🍫 88 -	🌈 vdss1 - Data Storage Softw 🥻	dss2 - Data Storage Sof 🗙		<u>\</u>	🔊 - 🖶 - 🕞 P	agina 🔹 🌀 Strumenti 🔹 🎽
	<i>open-e</i> enterpris	E CLASS STORAGE OS for EVERY BUS	SINESS		DATA STORA	GE SOFTWARE V6
SETUP	CONFIGURATION MAIN	TENANCE STATUS	HELP			
You are here:	volume manager 🔹 🕨	😹 Vol. groups				
	NAS settings	🥩 Vol. replication				
•₫⊂	NAS resources	Volume replication n	node			🔿 🚯 🕜
	iSCSI target manager →	Logical Volume	Init	Source	Destination	Clear metadata
	FC target manager 🔸	100000	done	F	2	-
p 🎒 Va	ol. replication	Mirror server TD	_		_	apply
└─o mirror_ro	everse	IP address: WAN			200.0.0.1	apply
Event View	er:	This is TRIAL version.	60 day(s) left 1	for evaluation	14. 17	
		Data Storage Software V6 - All	rights reserved			
Fine					Internet	tion% → //

Controllare che il volume di replicazione dello storage secondario sia in "Destination" Menu: CONFIGURATION -> volume manager -> Vol. replication -> nel riquadro Volume replication mode deve essere spuntato Destination

₽ ¥D551 on 192.168.0.64		
Eile Vie <u>w V</u> M		
🔲 💷 🕨 🧐 🚳 🕅	🖻 🧇	
Welcome to Data Storage Softwar	e V6	(Press F1 for help)
Model: Version: Release date: S/N: Licensed storage capacity:	Data Storage Software V6 6.0up65.8101.5217 64bit 2011-02-28 TRL00022 unlimited	
Network settings: Interface 1: eth0 IP:192 Interface 2: eth1 IP:100 Interface 3: eth2 IP:200 Interface 4: eth3 IP:192	.168.0.170/255.255.255.0 .0.0.1/255.255.255.0 .0.0.1/255.255.255.0 .168.3.220/255.255.255.0	
HTTPS settings: port: allow from:	443 all	
This is TRIAL version. 60 day(s	) left for evaluation.	
Selftest OK.		
To release cursor, press CTRL + ALT		

- Avviare lo Storage Primario VDSS1 e attendere fino alla schermata di "welcome"



### - Effettuare il login sull'interfaccia WEB del VDSS2

🖉 vdss1 - Data 9	Storage Software V6 - Windows I	nternet	Explorer					
🔆 🔁 🗸 🖉	https://vdss1/					▼ +7 ×	Google	<del>ب</del>
😪 🍲 😖 -	🏿 🏉 vdss1 - Data Storage Sof 🗙	🧑 vds:	s2 - Data Sto	rage Softw		<b>6</b> •	🗟 • 🖶 • 📴 F	agina 🔹 🌀 Strumenti 🔹 🎽
	open-e enti	ERPRISE C	LASS STORA	GE OS for EVERY BL	JSINESS		DATA STORA	GE SOFTWARE V6
SETUP	CONFIGURATION	MAINTE	NANCE	STATUS	HELP			
You are here:	volume manager		# V	ol. groups				
	NAS settings		🥔 V.	ol. replication				
• <i>4</i> (	NAS resources	- >	Volume	e replication	mode			ି 🚯 🚱
	iSCSI target manag	er ≯	Logical	Volume	Init	Source	Destination	Clear metadata
	FC target manager	•	1		dono	E.	-	-
i 🖑 Vo	ol. replication ( ())	7,-	Mirror	server IP				apply
⊢o mirror			IP addr	ess: N			200.0.0.2	
Event View	er:		This	is TRIAL version	ı, 60 day(s) left	for evaluation		apply
		Da	ita Storage	Software V6 - A	ll rights reserved			
Fine							Internet	100% + //

Controllare che il volume di replicazione dello storage Primario VDSS1 sia in "**Source**" Menu: **CONFIGURATION -> volume manager -> Vol. replication ->** nel riquadro **Volume replication mode** deve essere spuntato **Source** 

🖉 vdss1 - Data	a Storage Software ¥6 - Windo	ows Internet Explorer			
00-1	https://vdss1/			💌 😽 🗙 Google	۶ -
😒 🏟 88	👻 🏀 vdss1 - Data Storage Sof.	🗙 🌈 vdss2 - Data Storage Softw		🚹 🔹 🔝 👻 🖶 🔹 🔂 Pagi <u>n</u> a	🔹 🌀 Strumenti 👻 🎽
	open-e	ENTERPRISE CLASS STORAGE OS for EVERY B	USINESS	DATA STORAGE S	OFTWARE V6
SETUP	CONFIGURATION	MAINTENANCE STATUS	HELP		
You are here:	CONFIGURATION ▶ volume mana	ager 🕨 Vol. replication			
<b>N</b> / -	1.00	Create new volume	e replication t	ask	ି 🔁 🕜
	Vol. groups				
└ <u>∽</u> vg00		1 Info			
		assigned al	s with replication ready.	n functionality found or all volum	es have a task
		Replication tasks n	nanader		0 @ <b>?</b>
n 4 (	ol. replication ( R	Name		Start time	Action
		🥝 mirror		2011-07-19 00:53:08	
		Source volume:	lv00	00	
		Destination IP:	200	.0.0.2	
		Protocol type:	Syn	chronous	
Event Vie	wer: 🔀	This is TRIAL version	n, 60 day(s) left f	or evaluation.	
		Data Storage Software V6 - A	Il rights reserved		
Fine				Internet	100% 🔸 //

Controllare che il task di replicazione dello storage Primario VDSS1 sia avviato

Menu: **CONFIGURATION -> volume manager -> Vol. replication ->** nel riquadro **Replication Task manager** controllare che il/i task del Volume/i di replicazione siano avviati verificando lo **Start Time**, nell'eventualità che il task non sia avviato premere il relativo pulsante in verde e attendere la comparsa dello **Start Time**.

🖉 vdss1 - Data	Storage Softwa	re ¥6 - Windows Ir	ternet Explorer					
<b>GO</b> - <b>E</b>	https://vdss1/				💽 🔄 🗙 Google	P -		
😭 🏟 🔡	🛨 🄏 vdss1 - Dat	a Storage Sof 🗙	🌈 vdss2 - Data Storage Softw		🏠 🔹 🗟 👻 🖶 Pagina	🔹 🌀 Strumenti 👻		
	ор	<i>сп-с</i> епте	PRISE CLASS STORAGE OS for EVI	RYBUSINESS	DATA STORAGE S	OFTWARE V6		
SETUP	CONFIGUE	RATION	AINTENANCE STAT	US HELP				
netw	ork 🔸	🦪 Interfa	ces					
admi	nistrator	🧳 Failove	r					
🗳 H/W	RAID		Failover status			ି 🔁 🕜		
📚 s/w	RAID		Names		Status			
Eibre Fibre	Channel		Global status	Global status				
iscs:	I Initiator							
A hards	ware		Service runr	ning	inactive			
GUI			Node status	8	inactive			
			Ping node g	roup status	unknown			
<b>1</b> - 3 - 5	Failover	<b>1</b> 3 🕜	Individual ping r	iode status:				
-0 eth0 -0 eth1			IP: 127.0.0.	1	ok			
eth2			Failover service	s:				
			iSCSI		on			
			NFS		off			
Event Viev	ver: 🔀		This is TRIAL ve	rsion, 60 day(s) l	eft for evaluation.			
			Data Storage Software V	6 - All rights reserv	ved			
🔔 Fine					Internet	€ 100% + //		

Controllare il servizio di Failover dello storage Primario VDSS1 sia avviato e inattivo

Menu: SETUP -> network -> Failover -> nel riquadro Failover Status controllare che Failover serveces: iSCSI sia OK e Global Status: Service running sia inactive



Avviare il servizio di Failover dallo storage Primario VDSS1 Menu: SETUP -> network -> Failover -> nel riquadro Failover manager premere il tasto start

🖉 vdss1 - Data	a Storage Software V6 - Windov	vs Internet Explorer				
<b>30</b> - [	🖉 https://vdss1/				💌 😽 🗙 Google	P -
😪 🍲 88	👻 纋 vdss1 - Data Storage Sof	× 🤞 vdss2 - Data Stor	age Softw		🏠 🔹 🗟 👻 🖶 🕶 📑 Pagi <u>n</u> a 🔹	r 🧿 Strumenti 👻 🤌
	open-e	NTERPRISE CLASS STORA	GE OS for <b>EVERY</b> BUS	INESS	DATA STORAGE SO	FTWARE V6
SETUP	CONFIGURATION	MAINTENANCE	STATUS	HELP		
You are here	: SETUP ▶ network ▶ Failover					
• eth0 • eth1 • eth2 • eth3	Interfaces 🛛 🖓 😮					apply
		Failove	r manager Info Configuratior	of both node	s is in progress please wait.	© @ (?)
• eth0 • eth1 • eth2 • eth3	Failover 🛛 🕄 😯	In Ma se ac	order to deleg anual failover b rver to susper tive mode. Plea	start ate (switch) utton. This w id mode, whil ase note this	stop active server state to the passiv ill initiate a failover event and so e the secondary server will be p will stop the volume replication anual failover	ve server click th witch the primar promoted to process.
Event <u>Vie</u>	wer:	This is	s TRIAL version.	60 day(s) l <u>eft 1</u>	or evaluation.	
		Data Storage	Software V6 - All	rights reserved		
👔 Fine					Internet	100% +













Controllo Avviamento del servizio di Failover dallo storage Primario VDSS1
Menu: SETUP -> network -> Failover -> nel riquadro Failover manager

- )-> 😝 🔎 📑 vdss1 https:/	/vdss1/	合	- C) 🚼 - Google	P 🏦 🛛
open-e	ENTERPRISE CLASS STORAGE OS for EVERY BU	SINESS	DATA STORAGE	SOFTWARE V6
SETUP CONFIGURATION	MAINTENANCE STATUS	HELP		
u are here: SETUP ▶ network ▶ Failov	er			
Interfaces	<b>S</b> Failover status			<u>ः 😌 🕜</u>
eth0 eth1	Names		Status	
eth2	Global status			
etila	Service running		ok	
	Node status		primary/active	
	Ping node group	status	ok	
	Individual ping node	status:		
	IP: 127.0.0.1		ok	
	Failover services:			
	iSCSI		on	
	NFS		off	
	Communication via:			
<u></u>	eth2		ok	
Failover	eth0		ok	
eth0 eth1	eth1		ok	
eth2 eth3	Tack status		UK	
			Rupping	
			ranning	
	Connection:	Connected		
	Logical volume:	lv0000		
	Consistency:	Consistent		
	Destination info:			
	Logical volume:	Iv0000		
	Lonsistency:	consistent		
	IP address.	200.0.0.2		

Controllo sullo stato di funzionamento del servizio di Failover dallo storage Primario VDSS1 Menu: SETUP -> network -> Failover -> nel riquadro Failover status -> Node status: deve essere primary/active



Controllo sullo stato di funzionamento del servizio di Failover dallo storage Secondario VDSS2

Menu: SETUP -> network -> Failover -> nel riquadro Failover status -> Node status: deve essere secondary/passive

### **PROCEDURA DI SPEGNIMENTO**

🖉 vdss1 - Data	ı Storage Software V6 - Window	s Internet Explorer				_ 🗆 🗵
<b>OO</b> - [	) https://vdss1/				💽 😽 🗙 Google	P -
🛠 🏟 33	🔹 🌈 vdss1 - Data Storage Sof	🗙 🌈 vdss2 - Data Storag	e Softw		h 🔹 🖓 🔸 🔂 🗸 🔂 Pagina	• 🕥 Strumenti • »
	<i>open-e</i> E	NTERPRISE CLASS STORAGE	OS for EVERY BUS	INESS	DATA STORAGE SO	FTWARE V6
SETUP	CONFIGURATION	MAINTENANCE	STATUS	HELP		
You are here:	SETUP 🕨 network 🕨 Failover					
• eth0 • eth1 • eth2 • eth3	Interfaces 🛛 🕄 🕜	Failover (	manager Info Service is sto	pping		ः क <b>(</b>
• eth0 • eth1 • eth2 • eth3	Failover <b>()</b>	In o Man serv activ	rder to deleg Jual failover bi ver to suspen ve mode. Plea	start ate (switch) utton. This d mode, wł se note thi	stop ) active server state to the passi will initiate a failover event and s nile the secondary server will be p s will stop the volume replication Manual failover	ive server click th witch the primar promoted to process.
	_	<u>.</u>		16 M. C.W.S		
Event Viev	wer: 🔤	This is 1	TRIAL version.	60 day(s) lef	t for evaluation.	
Eine		Data Storage Sc	ottware V6 - All i	ights reserve	d Internet	€ 100% →
				1 1 1		111

Prima di procedere allo spegnimento dei 2 storage in Failover, accertarsi di avere effettuato lo Shutdown degli Host, successivamente interrompere il servizio di Failover tramite interfaccia Web del **VDSS1** 

Menu: **SETUP -> network -> Failover ->** nel riquadro **Failover manager:** Premere il tasto **stop** e confermare

Open-         SETUP       CONFIGURATI         ou are here:       SETUP > network > Fa         Interfaces       Interfaces         eth1       eth2         eth3       Failover         eth0       eth1         eth1       eth2         eth3       Failover	C ENTERPRISE CLASS STOR ON MAINTENANCE lover  Failov  Failov  Failov  Failov  Failov  S  N  Failov  S  N  Failov  S  N  Failov  S  N  S  N  S  N  S  N  S  N  S  N  S  N  S  N  S  N  S  N  S  S	RAGE OS for EVERY BUSI STATUS er status Vames I status Service running Vode status Ving node group st dual ping node st P: 127.0.0.1 er services: SCSI	NESS HELP atus tatus:	DATA STORAGE S DATA STORAGE S Status inactive inactive unknown ok on	SOFTWARE V6
SETUP CONFIGURATI ou are here: SETUP > network > Fa Interfaces • eth0 • eth1 • eth2 • eth3 Failover • eth0 • eth1 • eth1 • eth1 • eth1	CON MAINTENANCE	RAGE OS for EVERY BUSI STATUS er status Vames I status Service running Vode status Ping node group st dual ping node st tual ping node st F: 127.0.0.1 er services: SCSI	NESS HELP	DATA STORAGE S Status inactive inactive unknown ok on	SOFTWARE V6
SETUP CONFIGURATI ou are here: SETUP > network > Fa Interfaces • eth0 • eth1 • eth2 • eth3 Failover • eth0 • eth1 • eth1 • eth1 • eth1 • eth2	ON MAINTENANCE	STATUS er status Vames I status Service running Vode status Ping node group st dual ping node st dual ping node st tual ping node st Gual ping node st scsi SCSI	HELP atus tatus:	Status inactive inactive unknown ok on	
ou are here: SETUP > network > Fa Interfaces • eth0 • eth1 • eth2 • eth3 Failover • eth0 • eth1 • eth2	lover Failov Global Global Global Global Indivio I Failov is N	er status Vames I status Service running Vode status Ping node group st dual ping node st dual ping node st P: 127.0.0.1 'er services: SCSI	atus tatus:	Status inactive inactive unknown ok on	
Interfaces          • eth0         • eth1         • eth2         • eth3    Failover          • eth1         • eth1         • eth1	Failov Global Global S M F Indivia I Failov	rer status Names I status Service running Node status Ping node group st dual ping node st dual ping node st P: 127.0.0.1 rer services: SCSI	atus tatus:	Status inactive inactive unknown ok on	
Interfaces          • eth0         • eth1         • eth2         • eth3    Failover          • eth1         • eth1         • eth2	Failov Global Global F Individ I Failov	rer status Names I status Service running Node status Ping node group st dual ping node st P: 127.0.0.1 P: 127.0.0.1 FS	atus tatus:	Status inactive inactive unknown ok on	
<ul> <li>eth0</li> <li>eth1</li> <li>eth2</li> <li>eth3</li> <li>Failover</li> <li>eth0</li> <li>eth1</li> <li>eth1</li> <li>eth1</li> </ul>	Global Global F Indivio I Failov	Vames I status Service running Vode status Ping node group st dual ping node st dual ping node st P: 127.0.0.1 'er services: SCSI	atus tatus:	Status inactive inactive unknown ok on	
Failover	Global Global F Individ Failov	I status Service running Vode status Ping node group st dual ping node sv P: 127.0.0.1 Ver services: SCSI	atus tatus:	inactive inactive unknown ok on	
Failover eth0 eth1 eth2	Failov	Service running Node status Ping node group st <b>dual ping node s</b> P: 127.0.0.1 Y <b>er services:</b> SCSI	atus tatus:	inactive inactive unknown ok on	
Failover eth0 eth1 eth2	Failov	Node status Ping node group st <b>dual ping node s</b> P: 127.0.0.1 P <b>: services:</b> SCSI	atus tatus:	inactive unknown ok on	
Failover eth0 eth1 eth2	F Individ Failov	Ping node group st dual ping node st P: 127.0.0.1 r <b>er services:</b> SCSI	atus tatus:	unknown ok on	
Failover eth0 eth1 eth2	Individ I Failov	dual ping node s P: 127.0.0.1 P <b>er services:</b> SCSI VFS	tatus:	ok on	
Failover eth0 eth1 eth2	I Failov it	P: 127.0.0.1 Ver services: SCSI VFS		ok on	
Failover eth0 eth1 eth2	Failov	ver services: SCSI VFS		on	
Failover eth0 eth1 eth2	й Д	SCSI NFS		on	
Failover eth0 eth1 eth2	1	1FS		T STREETIN	
Failover eth0 eth1 eth2				off	
Failover eth0 eth1 eth2	Comm	nunication via:		Mercene:	
eth0 eth1 eth2	6	eth2		unknown	
eth0 eth1 eth2		ath0		unknown	
eth2				unknown	
eth3		3011		unknuwn	
		tatus			
		[ISCSI] mirror		running	
	Conne	ction:	Connecte	d	
	Loi	e info: qical volume:	Iv0000		
	Co	- insistency:	Consisten	t	
	Destir	nation info:			
	Lo	gical volume:	Iv0000		
	Co	nsistency:	Consisten	t	
	IP.	audress:	200.0.0.2		

Controllo sullo stato di funzionamento del servizio di Failover dallo storage Primario VDSS1 Menu: SETUP -> network -> Failover -> nel riquadro Failover status -> Globe status e Node status: devono essere inactive







Shutdown dello storage Secondario VDSS2 Riquadro: System shutdown-> Premere il tasto shutdown



Procedere con lo spegnimento dello storage Secondario VDSS1

Menu: MAINTENANCE -> shutdown -> scorrere la pagina fino al riquadro System shutdown

Firefox 🔻						
📄 vdss1 - Data Sl	torage Software V6	<ul> <li>Vdss2 - Data Storage :</li> </ul>	Software V6	× +		-
<u>e</u>	Vdss1 https://vds	s1/			f☆ + C Soogle	
	open- <mark>e</mark>	ENTERPRISE CLASS STOR	AGE OS for EVERY E	BUSINESS	DATA STORAGE S	OFTWARE V6
SETUP	CONFIGURATION	MAINTENANCE	STATUS	HELP		
You are here: N	MAINTENANCE 🕨 shutdown					
			CEvery	even week		
			C Every	odd week		
					apply	
	-					
	Sche	dules for restart			😯 🥴 😯	
		Info				
	•	No schedules fo	und.			
	-7					
	Syste	em shutdown			i 😯 🚱 🕜	
	Press	s the button to shut	down the sys	stem.		
					shutdown	
		to a local da fara da				
	Grea	te schedule for shi	utdown			
	Com	ment:				
		onday Jesday	Satu	irday tav		
		ednesday	- June			
		hursday iday	Start 🗌	00 💌 : 00 💌		
		1123	Q -			
			• Every	week		
			CEvery	odd week		
			- 7.03 <sup>1</sup> .8		apply	
Eventiónu	or 😿	Thic	is TRIAL vorcio	n 60 da <u>w(c) lo<del>ft</del> fo</u>		
Event view		Inis Data <u>Stor</u>	age Soft <u>ware V6</u>	- All right <u>s reserve</u>	d	
						-10

