

# *The ReadMe of Window WDDM Driver*

## **O.S. Support:**

- Windows Vista x86/x64 version
- Windows 7 x86/x64 version
- Windows Server 2008 x86/x64 version
- Windows Server 2008 R2 x64 version
- Windows 8 x86/x64 version
- Windows 2012 version (WHQL)

## **Driver Installation Guide:**

### INF Installation:

- Windows Vista with 32bits Version
  - Select the INF file in Vista\_S08\_x86
- Windows Vista with 64bits Version
  - Select the INF file in Vista\_S08\_x64
- Windows 7 with 32bits Version
  - Select the INF file in Win7\_x86
- Windows 7 with 64bits Version
  - Select the INF file in Win7\_S08R2\_x64
- Windows Server 2008 with 32bits Version
  - Select the INF file in Vista\_S08\_x86
- Windows Server 2008 with 64bits Version
  - Select the INF file in Vista\_S08\_x64
- Windows Server 2008R2 with 64bits Version
  - Select the INF file in Win7\_S08R2\_x64
- Windows 8 32bits Version
  - Select the INF file in Win8\_x64
- Windows 8 64bits Version
  - Select INF file in Win8\_x86
- Windows 2012Version
  - Select INF file in Win2012

## **Troubleshoot:**

- ASPEED Graphics WDDM Driver can't get the WHQL Logo on Vista/Windows7/Server2008/Server2008R2
  - ASPEED Graphics only provide basic 2D acceleration, can't meet the

WHQL requirement.

- Known Issues on Windows 8/2012:
  - Not support the modes with different display frequency

## **Contact:**

E-mail: [yc\\_chen@aspeedtech.com](mailto:yc_chen@aspeedtech.com)

Phone: 03.578.9568 ext. 810

ASPEED Technology Inc.