

# *The ReadMe of Win2K/XP/S03/S08 Driver*

## **O.S. Support:**

- Windows 2000
- Windows XP x86/x64 version (no logo)
- Windows Server 2003 x86/x64 version
- Windows Server 2003 R2 x86/x64 version
- Windows Server 2008 x86/x64 version
- Windows Server 2008 R2 x64 version

## **Driver Installation Guide:**

### INF Installation:

- Windows2000/XP/2003/2003R2 with 32bits Version
  - Select the INF file in Win2K\_XP\_S03\_x86
- WindowsXP/2003/2003R2 with 64bits Version
  - Select the INF file in WinXP\_S03\_x64
- Windows Server 2008 with 32bits Version
  - Select the INF file in WinS08\_x86
- Windows Server 2008 with 64bits Version
  - Select the INF file in WinS08\_x64
- Windows Server 2008 R2 with 64bits Version
  - Select the INF file in WinS08R2\_x64

## **Contact:**

E-mail: [yc\\_chen@aspeedtech.com](mailto:yc_chen@aspeedtech.com)

Phone: 03.578.9568 ext. 810

ASPEED Technology Inc.