




Chassis Quick Reference

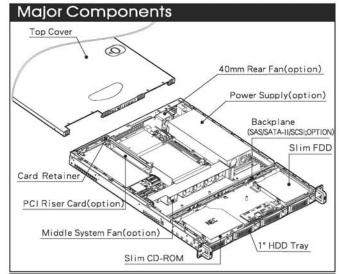

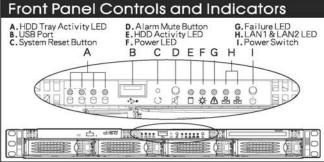



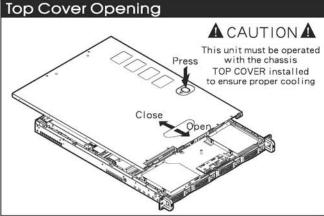

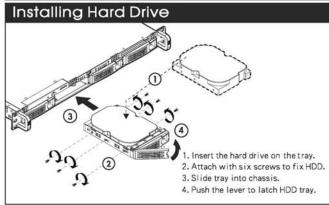


1. Fix the bracket on PSU by fastening screws. 2. Fix L-type bracket on opposite side of PSU. 3. Insert PSU into chassis by sloping. 3. Insert PSU into chassis by sloping. 4. Fasten the screw to fix PSU on chassis.



Installing Slim CD-ROM

- 1. Attach with two screws for adapter.
- 2. Insert two mounting holes to gauge pin by sloping.
- 3. Insert other two mounting holes to gauge pin by sloping.

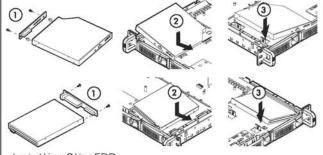

Installing Slim FDD

- 1. Attach with two screws for adapter.
- 2. Insert two mounting holes to gauge pin by sloping.
- 3. Insert other two mounting holes to gauge pin by sloping.

